


## TEMPERATURE and HUMIDITY SETTING FOR MEKANO DRY CABINETS




The control panel has two control units:

The left part concerns the temperature regulation

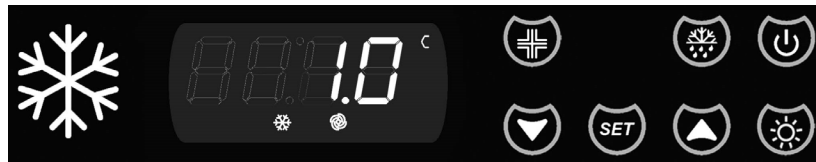

The right part concerns the regulation of the humidity value

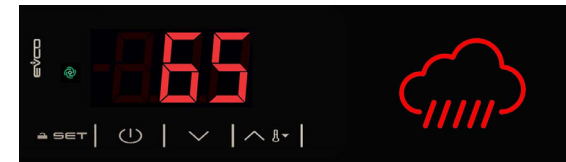



Following numerous tests, the recommended parameters are listed below:


- 1- TEMPERATURE = +1.0°C
- 2- HUMIDITY = 65%
- 3- OZONE = ACTIVE

To set the above values, proceed as follows:


### 1- SETTING THE TEMPERATURE (LEFT SIDE of the control panel)

Press the button "SET" , the "compressor" LED will flash.

Within 15 seconds, press the buttons "UP"  or "DOWN"  until the desired temperature is set ( +1°C).

To store the set temperature, press again the button "SET" : the "compressor" LED will switch off.

### 2- SET OZONE TO "ON"


By pressing once the button "OZONE"  you can understand how the machine is working at that moment.  
If, after pressing the key, appears on the display:

**ON = the sterilization cycle is active (a 3-minute cycle will be performed every 3 hours)**

If it appears :

OFF = the sterilization cycle is NOT active, repeat the operation to activate the function.

### 3- SETTING THE HUMIDITY (RIGHT SIDE of the control panel)

Unlock the keyboard by holding down for 3 sec. SET  and wait for "UnL "

Then click on the arrow "DOWN"  or "UP"  to set the desired humidity (65% recommended)

Confirm by pressing the button 